

Please always keep this Instruction in the vehicle

Attention


49 CFR 395.22 (g)

If a driver uses a portable ELD, the motor carrier shall ensure that the ELD is mounted in a fixed position during the operation of the commercial motor vehicle and visible to the driver when the driver is seated in normal driving position.

A driver using an ELD must have these items onboard the commercial motor vehicle (CMV)

- 1. An ELD user's manual for driver describing how to operate the ELD, and step-by-step instructions to produce and transfer the driver's hours-of-service records to an authorized safety official.
- 2. A supply of blank driver's records of duty status (RODS) graph-grids sufficient to record the driver's duty status and other related information for minimum of 8 days




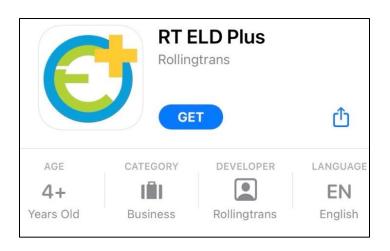



Login to the RT ELD PLUS App

- 1. Allow RT ELD PLUS to use Bluetooth, press "ok"
- 2. Login with your email and password. Contact fleet manager if you do not have one.
- 3. Allow RT ELD PLUS to use location while using, press "Allow While Using App"
- Allow RT ELD PLUS to get GPS location precisely, press "Change to Always Allow"

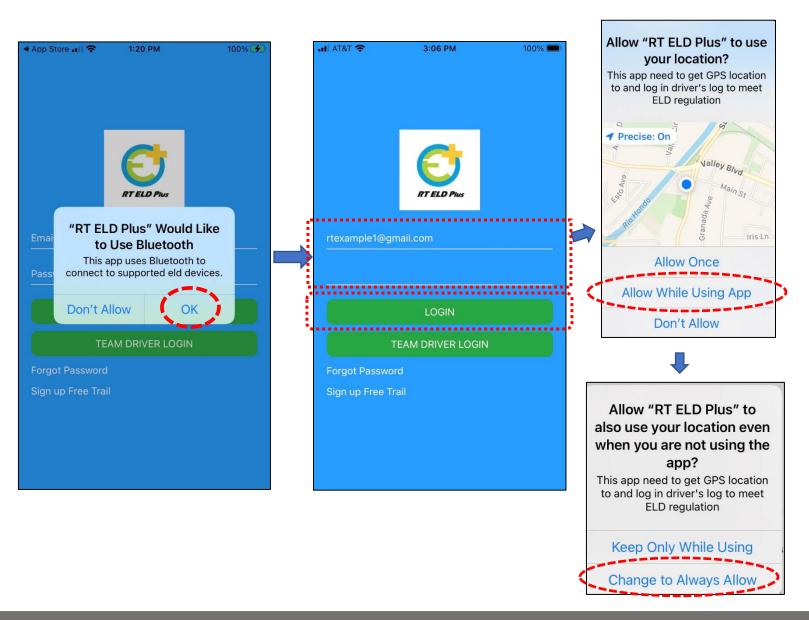



How to Setup your Company, Drivers, and Vehicles Account

Account Management Setting:


Manager can manage the fleet on the app by managing driver accounts and vehicle accounts.

Driver Account Setting:

Fleet manager could manage driver accounts by adding and deleting from the app.

Vehicle Accounts Setting:

Fleet manager could examine available vehicle list in the app.

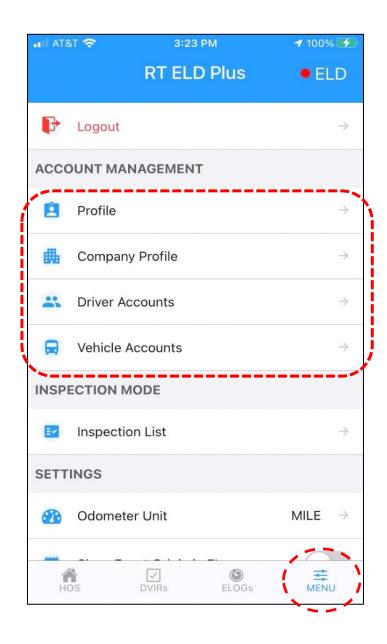



How to Connect ELD Interpreter with your Tablet/Phone

- I. ELD APP Pair with ELD interpreter
 - a. Open and login Rollingtrans ELD app "RT ELD PLUS"
 - **b.** Plug the cable into your vehicle
 - c. Ignite the vehicle Don't turn on the engine, just the ignition
 - **d.** Plug the cable into the ELD interpreter
 - **e.** Two red solid lights and two green blinking lights will show up on the device (For more detailed instructions, please check out our step-by-step "How to Connect" guide.
- II. Always allow the app to use the location & enable Bluetooth connection
- III. Your tablet/phone will automatically pair with your Bluetooth

(For who are still using the RTOA47 devices, the connection method is the same as the older version, please contact for support)





The Paired Devices number will match the number on the device





How to Create Your New Log for Today

I. Create New DVIR

- To create your new log today, you need to start from new DVIR
- 2. Select vehicle
- 3. Input starting mileage and all shipment and trailer information



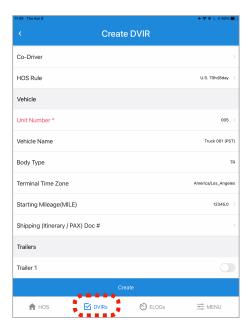

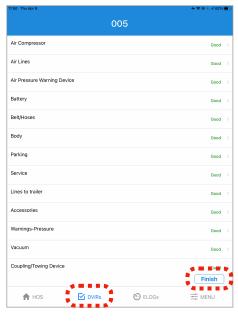



4. Vehicle and trailer inspection - click finish when you complete inspection


II. Go to E-log

Click the Elogs Tab in the bottom functional bar and select today's Elog on the list

Change

Status



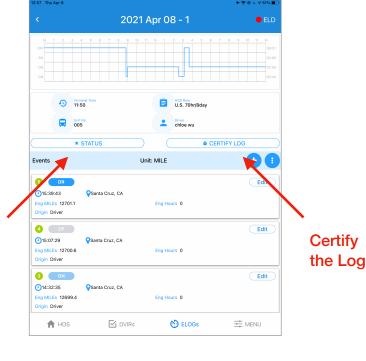

Certify the Log:


At the end of the day, please follow the procedure to certify your log

- 1. Turn of the Engine
- 2. Change Status to OFF or SB
- Click Certify the Log and key in the ending information

Reactivate the Log:


After you certify the log you are not allow to add/edit the log. If you need to drive or need to modify the log again, please click reactive the log.

Remember to certify the log again after you finish your drive drive today or modify the log.

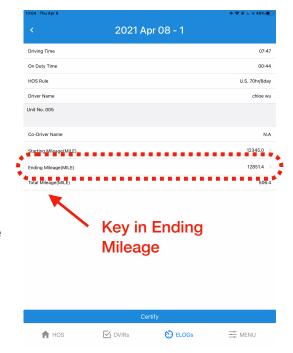


How to Display and Send Your Driver's Log for Inspection

- 1. Go to "Menu Tab", and click on "Inspection List"
- 2. Enter 4 digits PIN if Driver has one; If no, press "Skip" to get into "Inspection List"

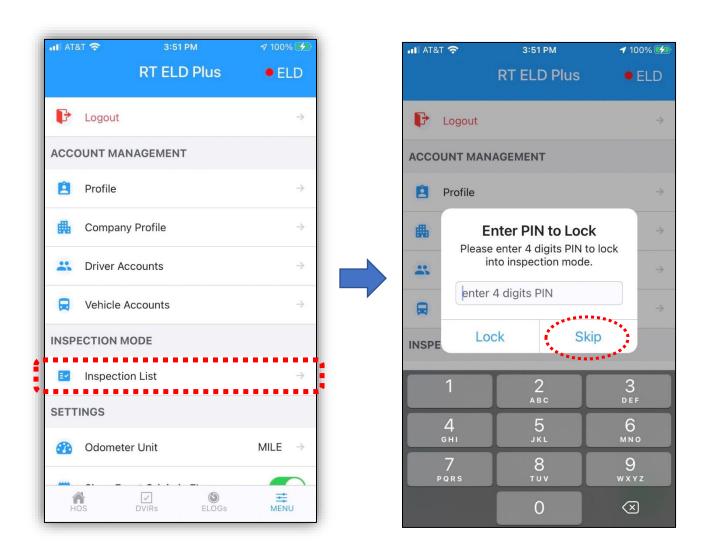



How to Display and Send Your Driver's Log for Inspection (Cont.)

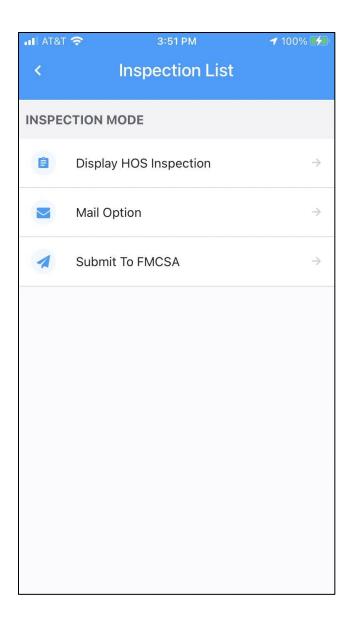

Option 1: Display HOS Inspection

The app will display driver's HOS record from the past 8 or 14 days on the screen for roadside inspection.

Option 2: Email Option

Type in inspector's email address in the "Email to" blank. Select date and days. Press "Send" to receive driver HOS record in PDF file in email.

Option 3: Submit to FMCSA Website

Type in the Safety Authorized Office's inspection code in "Comment" area. Select a date and days. Press "Send" to receive in FMCSA inspection website.



ELD Malfunction Trouble Shoot

No.	Issues	Action
1	Can not find Paired ELD interpreter in App	Close the App from running in the background and open it again Make sure Bluetooth in the App setting is on
2	Can not Pair with ELD interpreter	Make sure the light on the device shows two red solid light and two green blinking light
3	ELD interpreter Paired and see green light in App but still not sync with App or won't do auto switch driving status	Check the ELD Protocol you choose is correct. You should choose: J1939/1708: For Truck, Bus, and Ford 650 OBD2: For Pick-up, Van, and Sprinter
4	Can not open new log	Make sure you certify all of your previous log before you create a new log.





Tech Support

(844) 538-7267

(626) 416-5098

Service@Rollingtrans.com

Tutorial Video

For more information and demo please check out the videos below

Rollingtrans Driver Log Operation Part I

(Daily Log Operation)

http://bit.ly/2AEFJYO

Rollingtrans Driver Log Operation Part II

(Edit Log and Add Remark)

http://bit.ly/2B303pz

ELD Installation and Set Up

http://bit.ly/2AFuX3l

